


The BG-Lure cartridge with excellent emission profile

The BG-Lure cartridge, especially used by scientists and health-care specialists to monitor mosquito populations, comes as a plastic cartridge filled with three components in granular form. Specified openings of the cartridge allow a controlled release of the volatile components.

The BG-Lure cartridge provides

- easy handling no contact with the components.
- **protection** of the odor **against environmental influence** the plastic cover protects the components against washing out and extends the durability.
- **excellent emission profile** a more consistent emission rate in comparison to the former version of the BG-Lure provides a more constant mosquito catch rate over time.

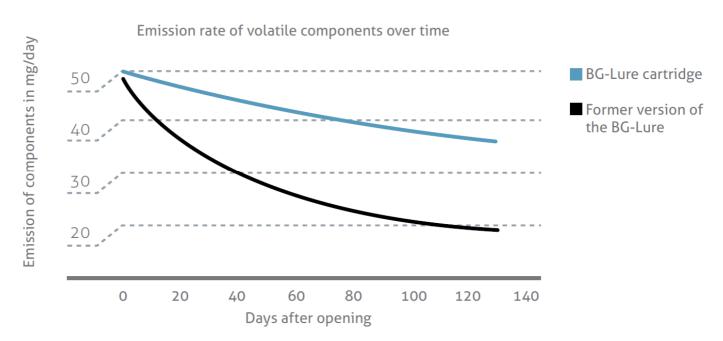



Handling of the BG-Lure cartridge

Before placing the cartridge in the trap unwrap the plastic cover from the BG-Lure cartridge [F1].

The unwrapped BG-Lure cartridge [F2] can be placed in the old BG-Sentinel [F3] and BG-Mosquitaire traps [F4] at the same place as the former BG-Lure. In the BG-Sentinel 2 it fits into an opening in the trap cover [F5].



[F1]







[F2] [F3] [F4]



[F5]

We recommend replacing the BG-Lure cartridge after 5 months.

Contact



Agro Technic Pte Ltd

No. 32 Ang Mo Kio Industrial Park 2 #01-01/02 Sing Industrial Complex Singapore 569510 Tel: (65) 64821828 Fax: (65) 64812631 Email:agro@agrotech.com.sg

Website: www.agrofog.com